
 


 
What's in the box



Fire tablet

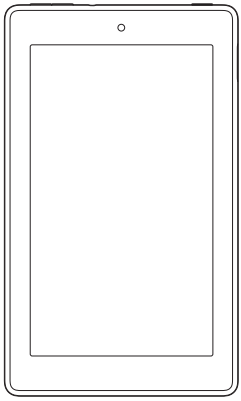








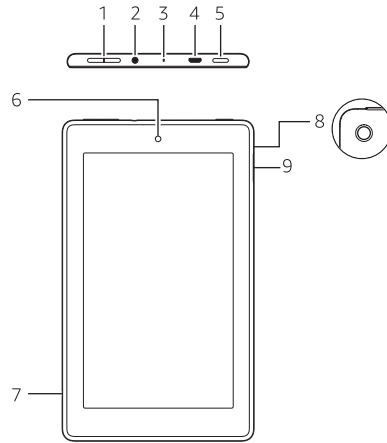


Micro-USB cable
(for power)




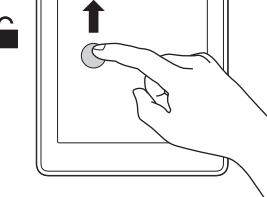
Power adapter

Fire 7 overview




- | | |
|---|---|
| 1.  Volume up/down | 6.  Front camera |
| 2.  Headphone jack | 7.  Speaker |
| 3.  Microphone | 8.  Rear camera |
| 4.  Micro-USB port | 9.  MicroSD slot
(card sold separately) |
| 5.  Power button | |

Getting started

1. Power on your tablet. 
2. Swipe up to unlock. 
3. Follow the on-screen instructions to complete setup and enable features.

Charging your tablet

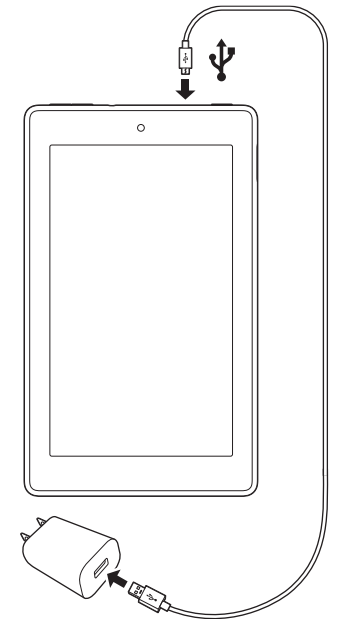

For troubleshooting tips and Amazon Customer Service, visit www.amazon.com/devicesupport.