




What's in the box

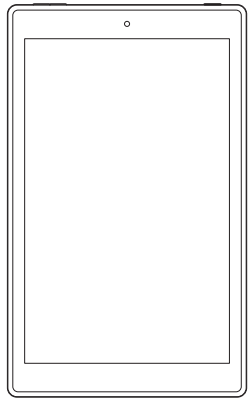

Fire tablet

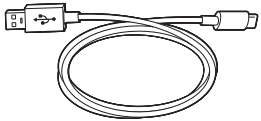


 USB-C cable
(for power)



Power adapter

Fire HD 10 overview

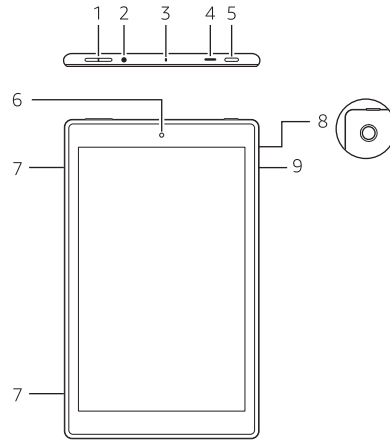


- | | |
|--------------------|--|
| 1. Volume up/down | 6. Front camera |
| 2. Headphone jack | 7. Speakers |
| 3. Microphone | 8. Rear camera |
| 4. USB-C port | 9. microSD slot
(card sold separately) |
| 5. Power button | |

Getting started

1. Power on your tablet.
2. Swipe up to unlock.
3. Follow the on-screen prompts to connect to a Wi-Fi network, then sign in to an existing account or register to create a new account.

Charging your tablet

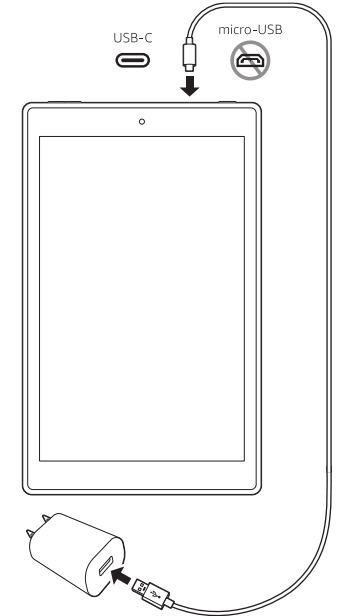

For troubleshooting tips and Amazon Customer Service, visit www.amazon.com/devicesupport.